X30 Apollo | System




www.bourgault.com



X30 System Components Cross Tillage Leading Tank






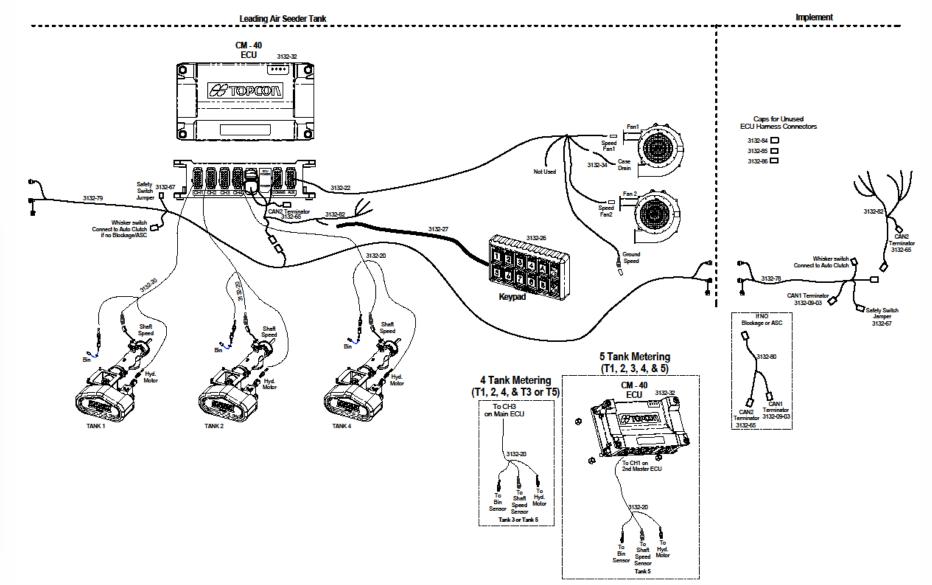



Main Tank Harness

Part # 3132-78 Topcon #1004998-01

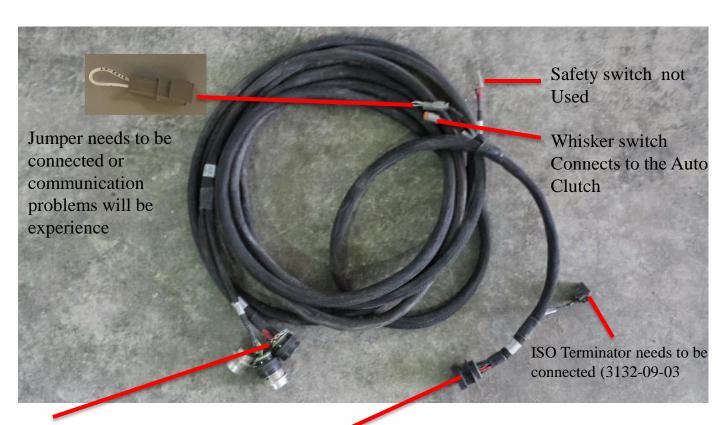


Connectors hook to the rear plate of the Leading tank.

Hooks to the breakout harness (3132-82)



Break out harness and I/O ECU for blockage, sectional control, NH3 and liquid

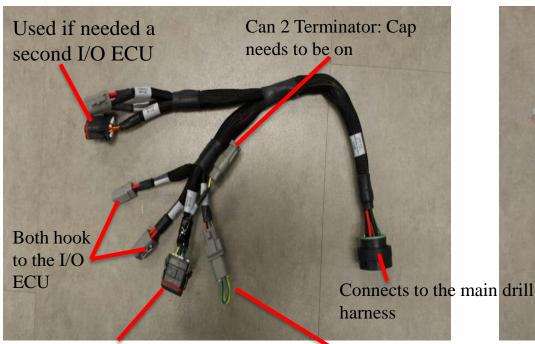






Hook to Comms plug on I/O ECU


Breakout Harness
Part # 3132-82
Topcon #1005037-01

I/O ECU Part# 3132-33 Topcon #1004253-01



Topcon blockage harness

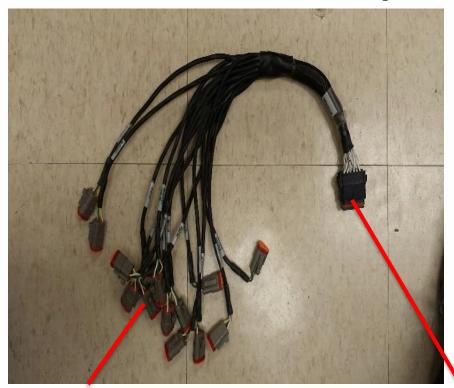

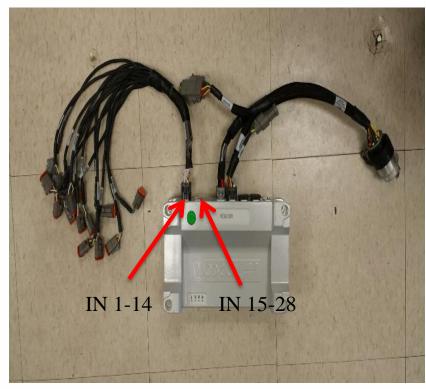

Leads go to the blockage sensors. Note: don't need the voltage adapter with the Apollo.

Plugs into the I/O on (IN 1-14) and if you have more than 16 sensors you will need another harness that will plug in on (IN 15-28)

Blockage harness Part # 3132-46 Topcon #AGA5513



Note: if using old sensors you will need this jumper harness 3132-67



Auto clutch extension harness



This harness connects to the main tillage harness on the whisker connector. It will then run to the front to the solenoid on the 3320/3720 and to the proximity switch on the 5810/8910. Note: with the Apollo system you will no longer need the relay.

Part # 3132-63