X30 Apollo | System



www.bourgault.com



X30 System Components Cross Tillage Tow Behind Tank



Whisker plug: auto



Cross Tillage Harness

Bourgault Part # 3132-79 Topcon # 1004997-01

Back of the machine connections


clutch connection The Tractor end hooks into the ISO plug and the power harness. Aux Power: not ECU Breakout: used if adding Topcon Blockage used

Safety Switch plug needs to have this jumper plug on it or you will loose communication with the ECU's.

Next slide will come off the ECU Breakout



Break out harness and I/O ECU for blockage

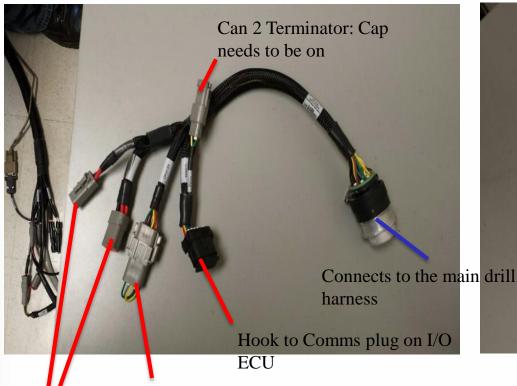

n drill

Not used (needs loop plug)


Both hook to the I/O ECU


Breakout Harness
Part # 3132-81
Topcon #1005036-01

I/O ECU Part# 3132-33 Topcon #1004253-01



Topcon blockage harness

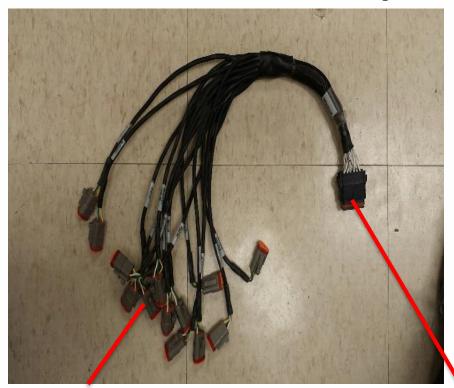

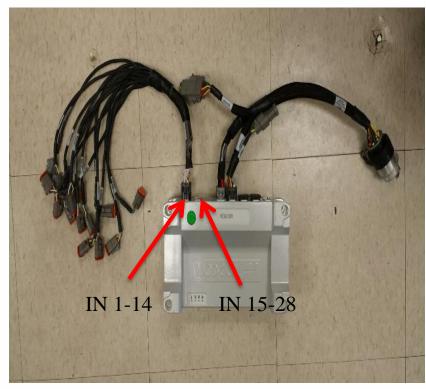

Leads go to the blockage sensors. Note: don't need the voltage adapter with the Apollo.

Plugs into the I/O on (IN 1-14) and if you have more than 16 sensors you will need another harness that will plug in on (IN 15-28)

Blockage harness Part # 3132-46 Topcon #AGA5513



Note: if using old sensors you will need this jumper harness 3132-67



Auto clutch extension harness



This harness connects to the main tillage harness on the whisker connector. It will then run to the front to the solenoid on the 3320/3720 and to the proximity switch on the 5810/8910. Note: with the Apollo system you will no longer need the relay.

Part # 3132-63