



BOURGAULT

X30

Monitor/Controller

INGENUITY.

SIMPLICITY.

DURABILITY.

 **TOPCON**
Precision Agriculture

www.bourgault.com




The following pages describe the steps required to disable the John Deere Task controller.


(This may be required for proper ISO function)




Enter Display Settings

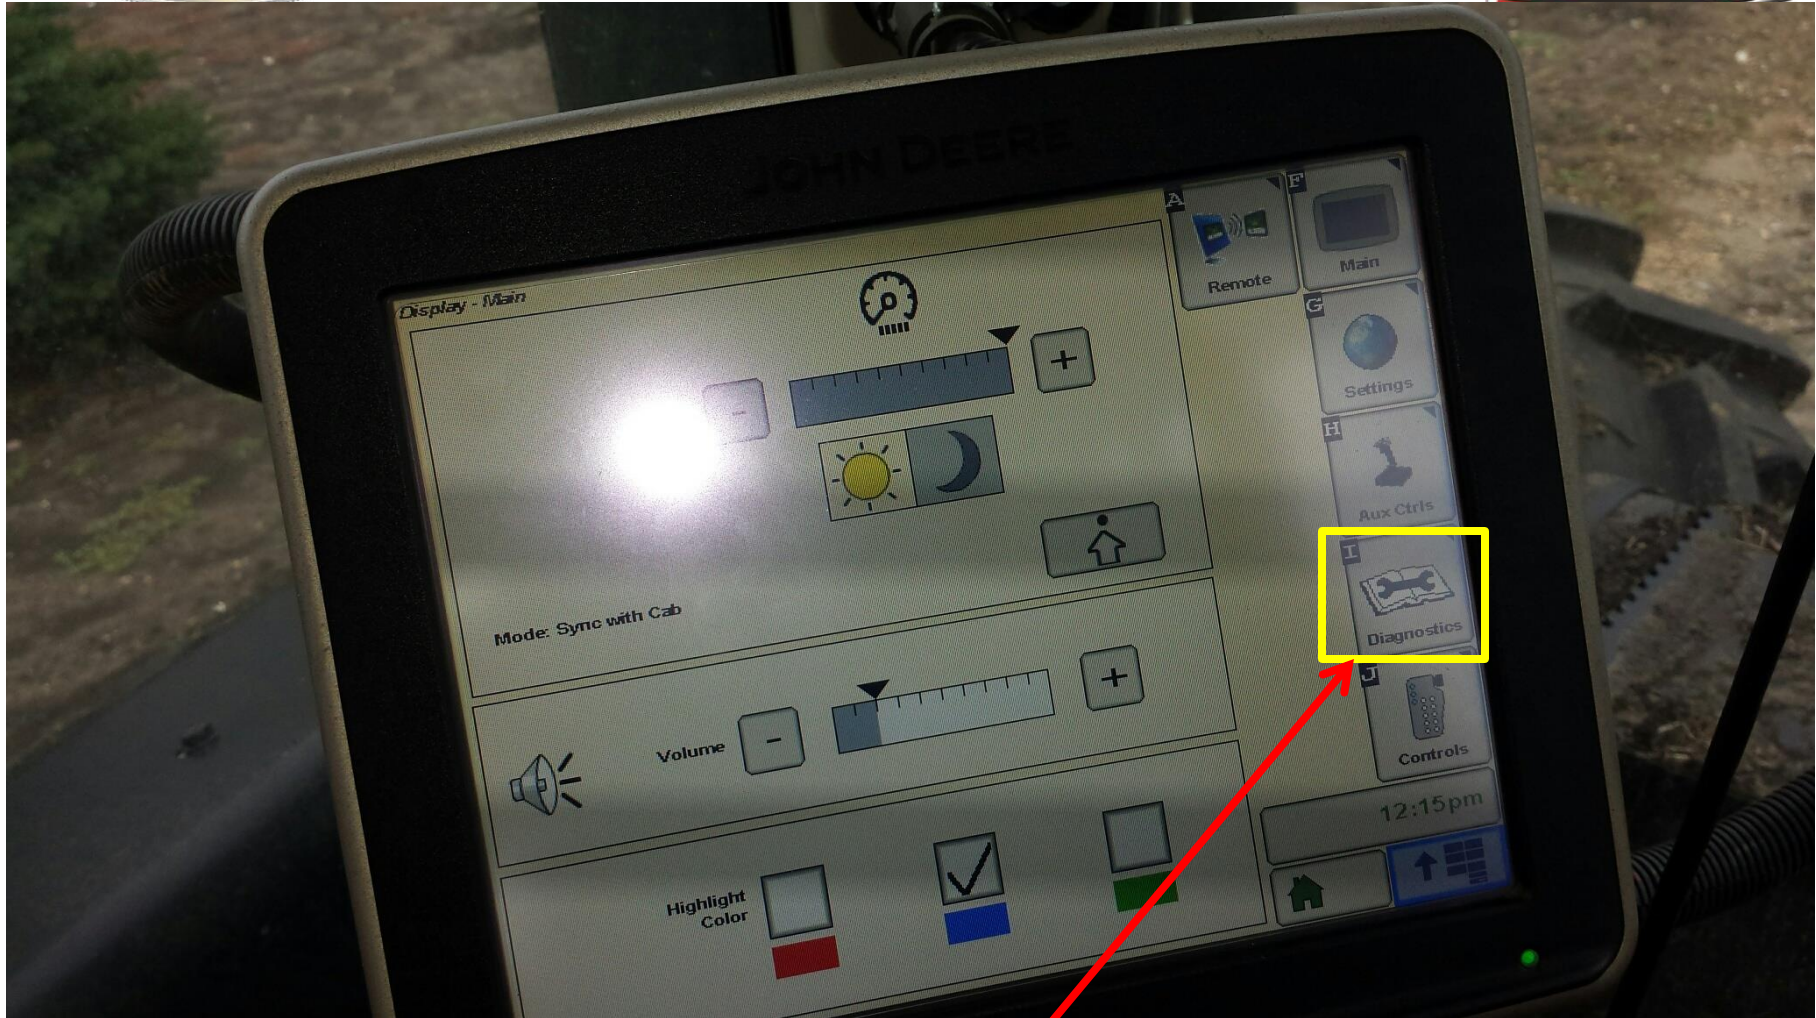


Enter Diagnostics

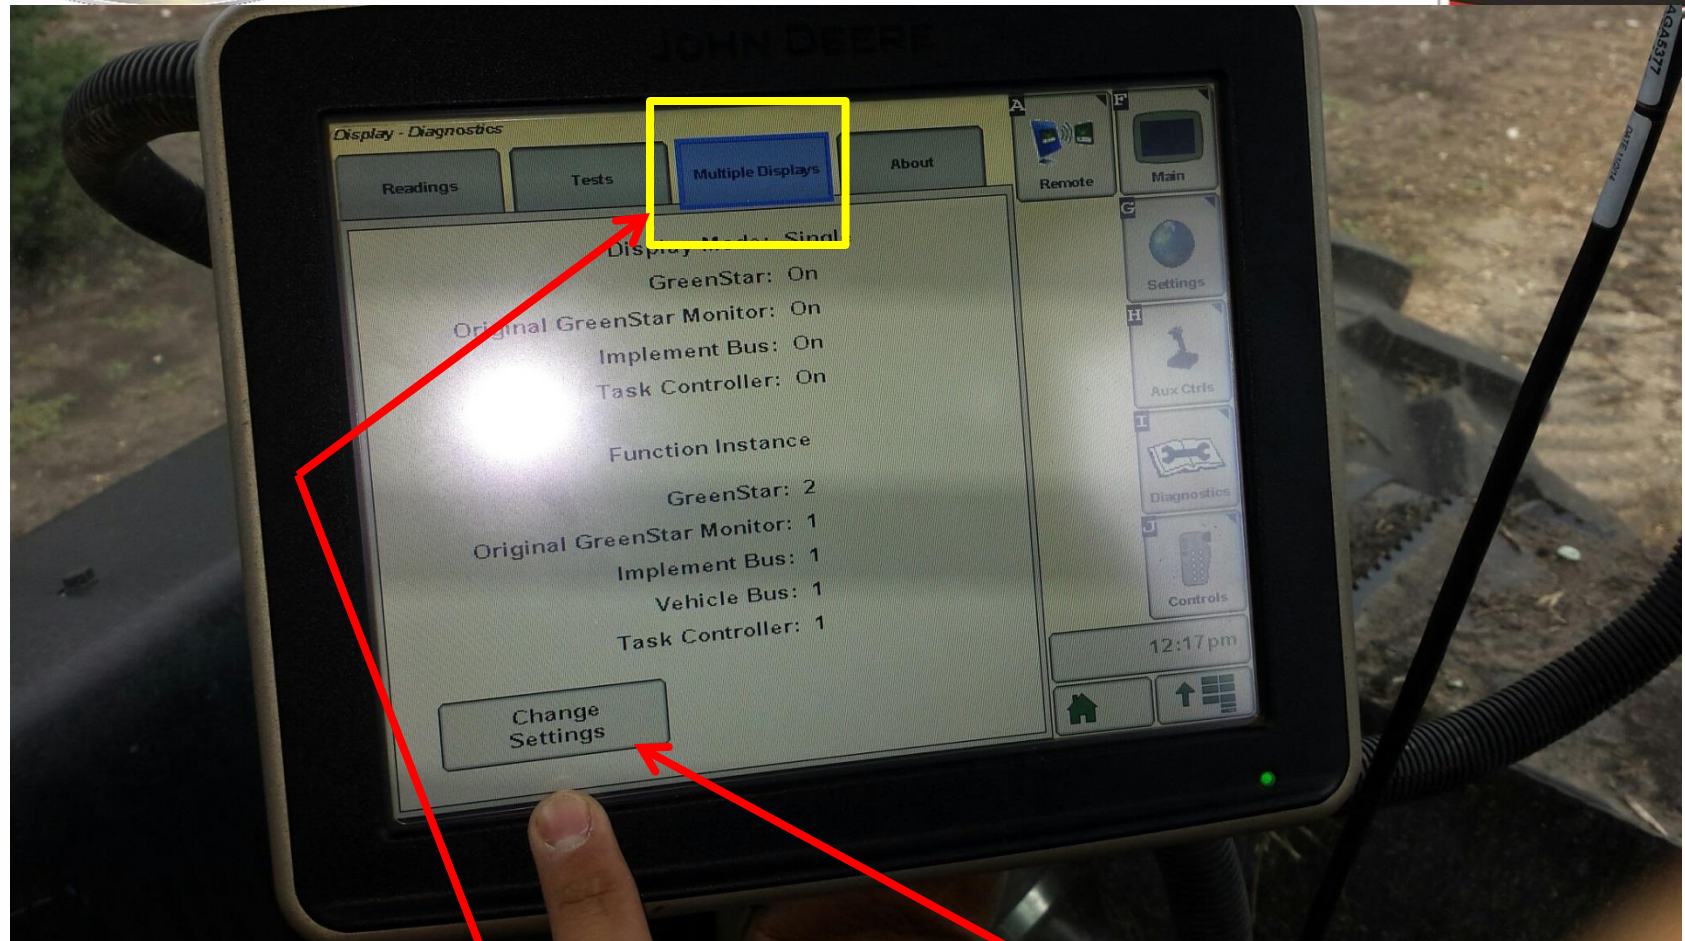


Select Multiple Displays then touch Change Settings

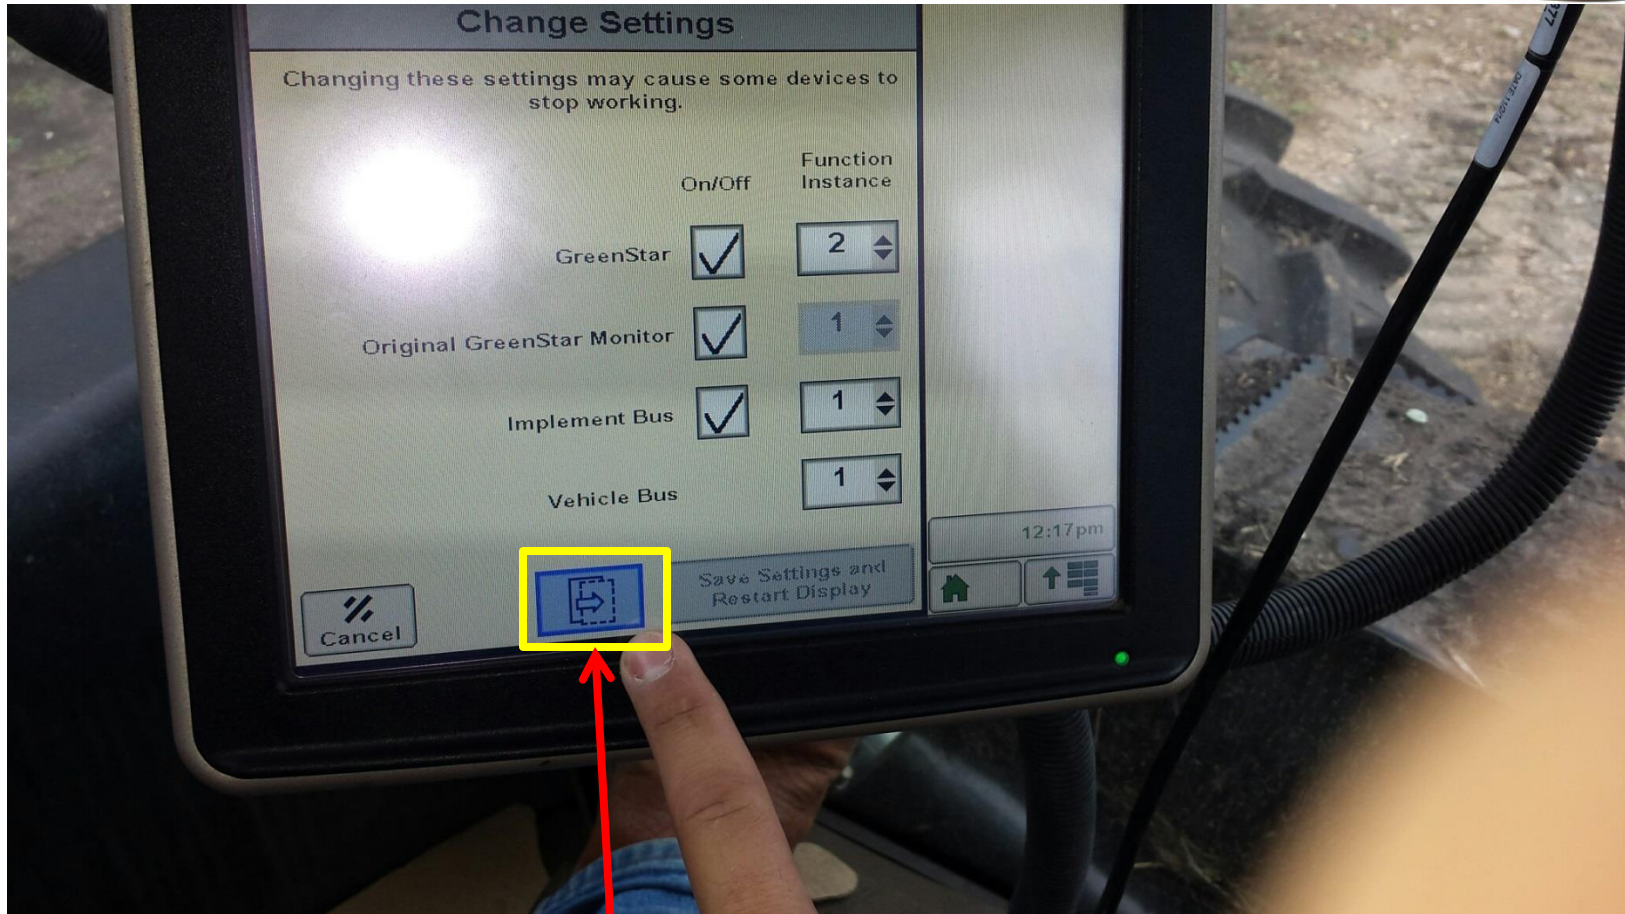

Touch here

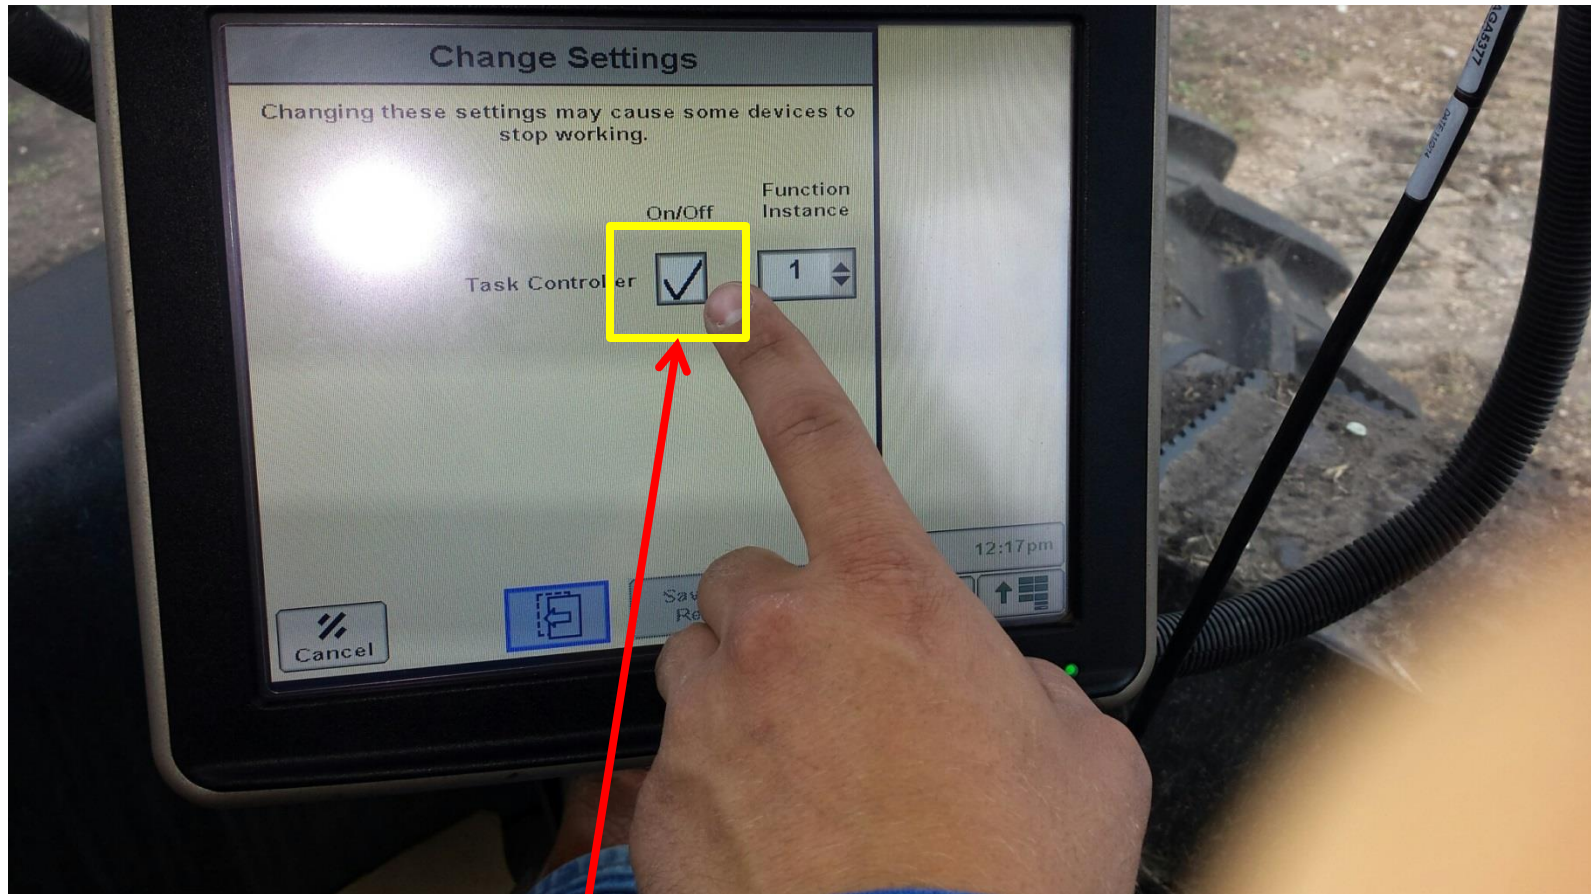

Touch here to disable Task Controller

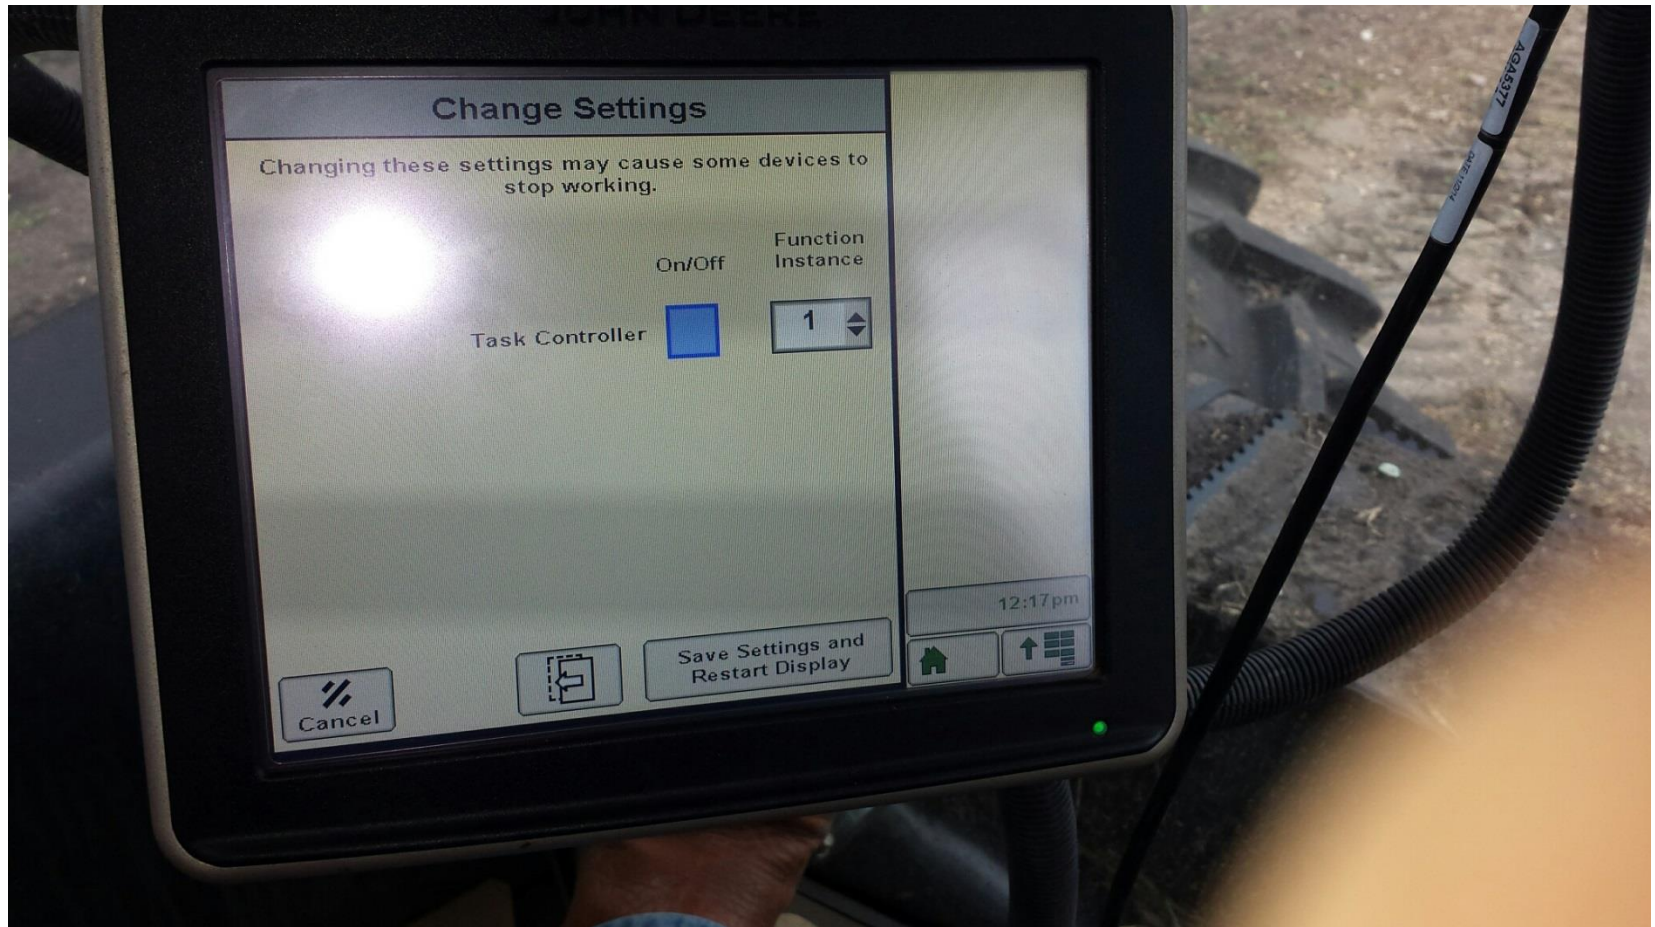

Done!