
Printing a Coverage Log


From the desktop select GDX viewer




Select Load File

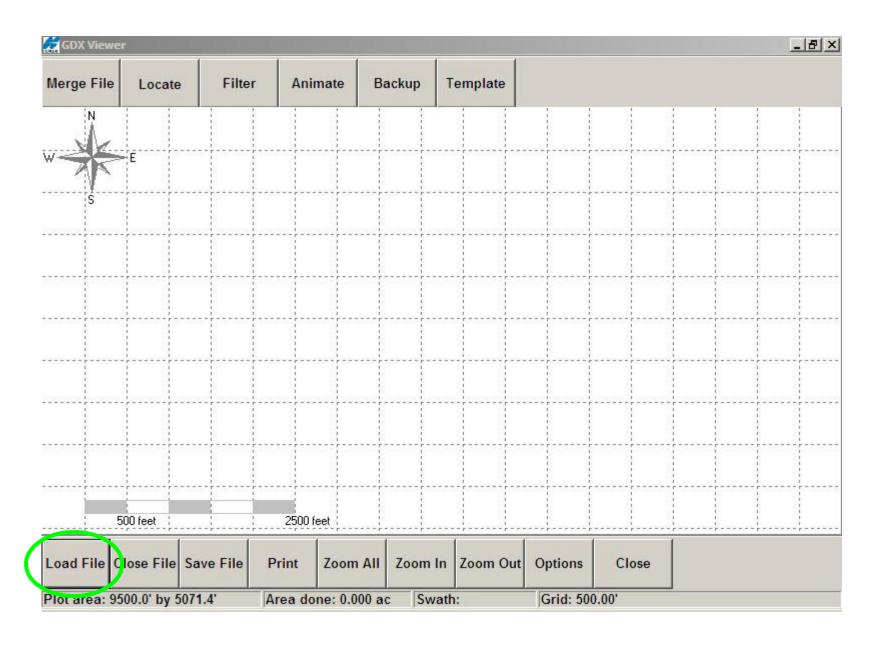


Select the file you wish to view.

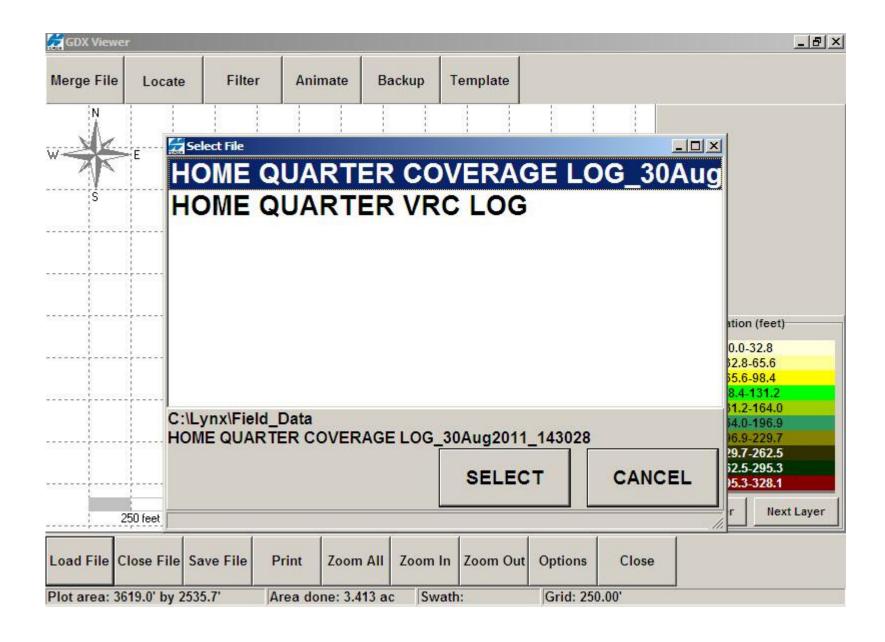


GDX Viewer will only show you the coverage map and GPS quality.

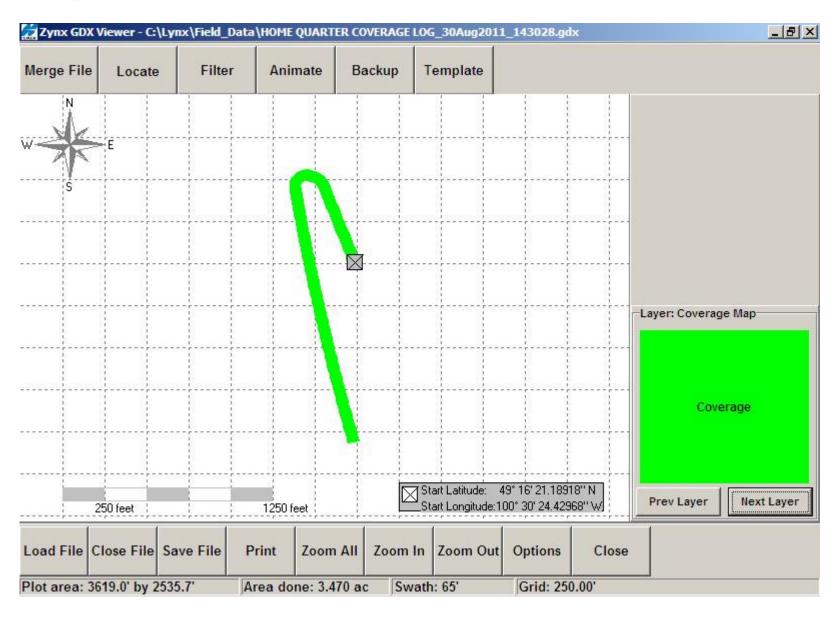

Select PRINT

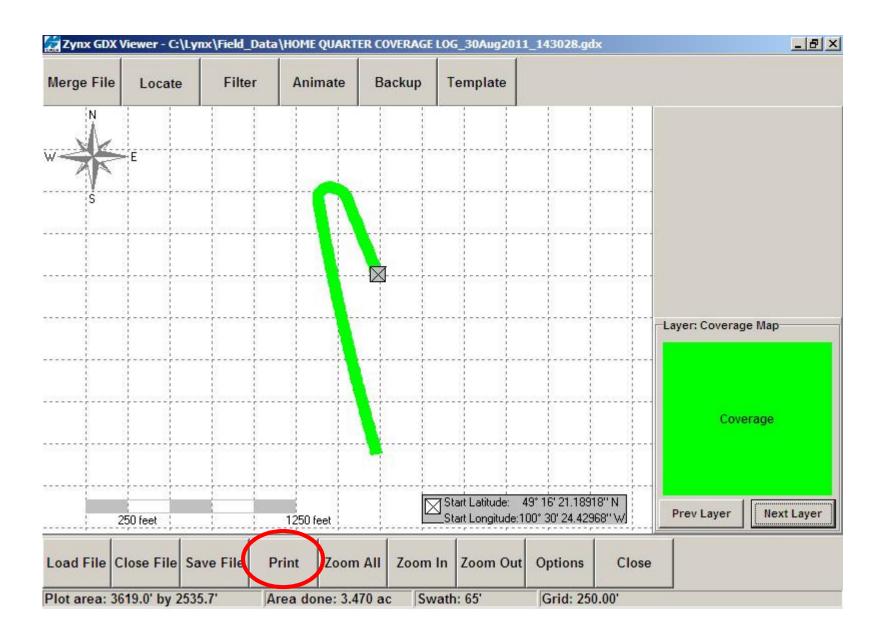


Add any information you wish to print on your report

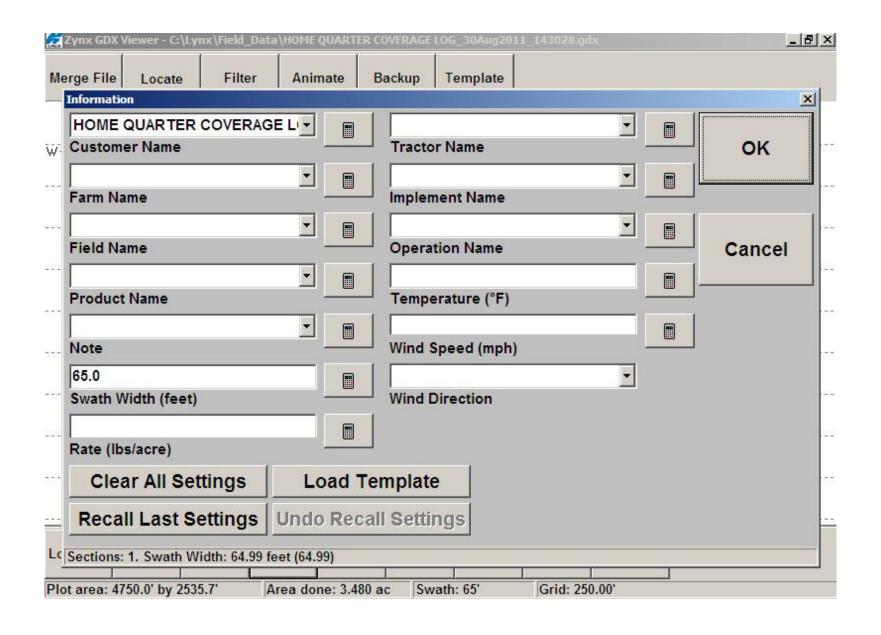


Page 1 coverage map

🚅 Map Report - Coverage Map Date of Operation: TOPCON File: HOME QUARTER COVERAGE LOG_30Aug2011_143028 Start Late de . 48° 18° 21.18818" N Start Language 100° 10 24 42568" W Coverage Client: Tractor: Fam: Implement: Field: Operation: TRACK Note: Covered Area: 1.41 Ha Swath: 19.8 meters Avg. Temp: Avg. Wind: Product: Rate: Avg. Humidity: Started: 30 Dec 1899 00:00:00 Avg. Delta T: Finished: 30 Dec 1899 00:00:00 Productive Time: 00 minutes TOPCOIL Report Printed: 1 September 2011 Page 1 of 2


Page 2 elevation map

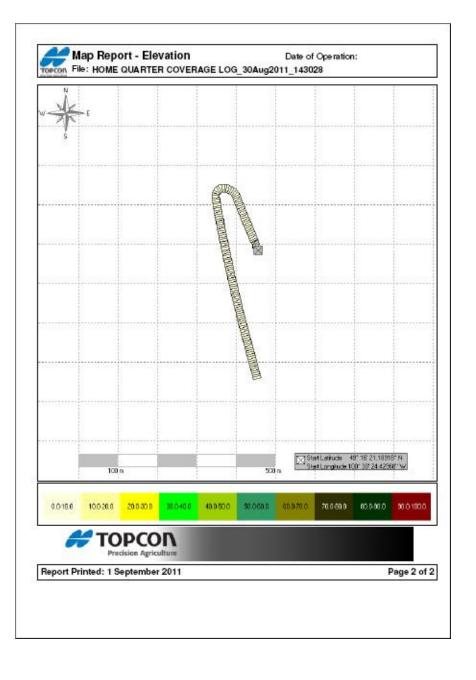

The Units shown in GDX Viewer are controlled by the units set in Guidance.

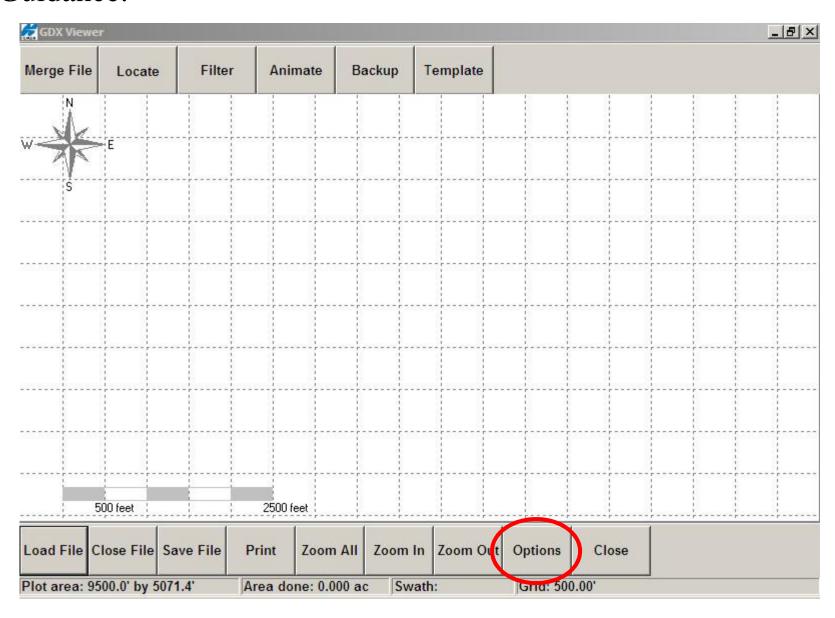

These units are set by the units selected in the Guidance program

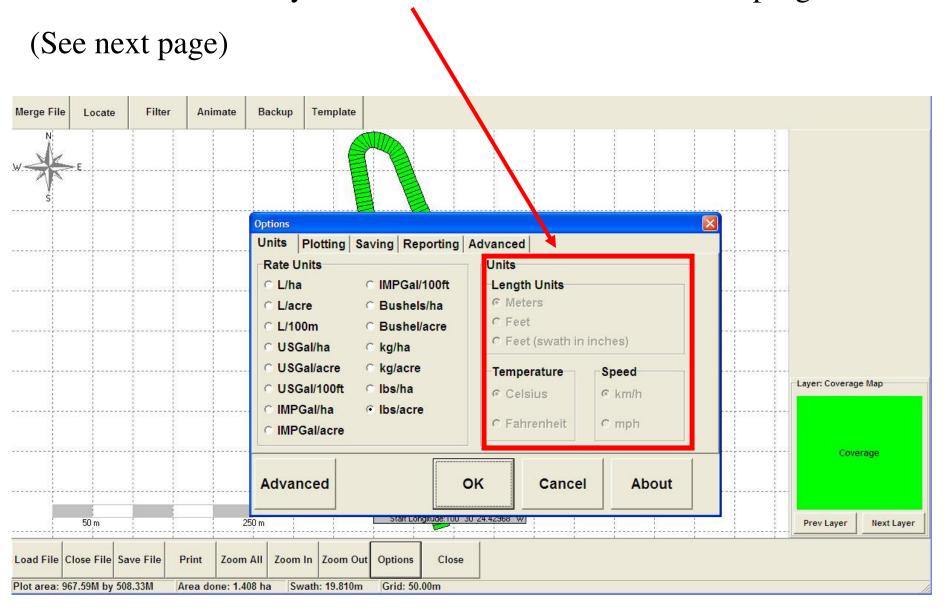

These units are automatically pulled into GDX Viewer.

