## **Seeding a Omnistar Position**

The message "Do you wish to seed the OmniSTAR Position, Yes or No .... If Yes? The tractor MUST not have moved since powering down." is referring to when OmniSTAR is converging. It will help with faster converging when the receiver is powered up again.

